

# User Manual

---

## **For your safety**

Read the manual carefully to ensure proper use of the player and to avoid any danger or physical damage.

### **Product Use**

#### **Improper use can result in explosion, fire or electric shock.**

- Do not disassemble, repair or modify this player on your own.
- Do not get the play wet or drop it in water.
- Do not place the player in damp, dusty or sooty areas, as it could result in fire or electric shock.
- Do not leave the player in areas above 35°C ( such as a sauna or inside a parked car )

#### **To avoid your hearing damage**

- Avoid using your player at high volume levels, as it may result in permanent hearing damage. If you experience ringing in your ears while using the earphone, remove the earphone immediately and lower the volume.

#### **To avoid a risk of traffic accident**

- Do not use the earphones when you driving a bicycle, automobile or motorcycle.
- Take care not to tangle the earphone cable around your arms or neighboring objects while driving, working out or walking, as it result in a car accident or other injuries.

#### **Avoid malfunction**

- Do not cause excessive impact on the player by dropping it. Do not place heavy objects on top of the player.
  - Prevent any foreign particles or dust from entering into the player.
  - Always use the accessories provided by or approved by your supplier.
  - Do not spray water on the player. Never clean the player with chemical substances such as benzene or thinner, as it may cause fire, electronic shock or deteriorate the surface.
  - Do not place the player near magnetic objects, as it may cause a malfunction.
- 

## **Contents**

### **Chapter 1. Basic Information**

- Products features
- Button Functions
- Charging the Battery
- Basic Use

## **Chapter 2. Multimedia Function**

Listening to Music  
Playing Video  
FM Radio  
Photo Viewing  
Reading E-books  
Voice Recording  
Explorer  
Game

## **Chapter 3. Settings**

Music  
FM Radio  
Record  
Display  
System  
Power Off Time  
Language

## **Chapter 4. Troubleshooting**

Troubleshooting

## **Chapter 5. Appendix**

Products Specifications  
Converting Video Files

=====

## **Chapter 1. Basic Information**

### **Products features**

- Display: 2.8-inch touch TFT screens.
- Operation interface: Friendly operation interface, easy for operation.
- Memory: Built-in flash memory
- Card slot: Micro-SD card slot to expand memory.
- Speaker: A high quality speaker.
- FM: FM stereo radio.
- Interface: USB2.0 .
- Language: Multi-languages.
- Audio: MP3, WMA format files, etc.
- Video: AVI format files.

### **Button Functions**

- 1) **PLAY**: Power on / off.
- 2) **Hold**: Lock the buttons, unlock the buttons
- 3) **Res**: system *Reset*

## Charging the Battery:

Fully charge the rechargeable battery before using the player for the first time or when it has not been used for a while.

Method of charging on the player by USB port on your PC.

Connect the USB cable to the USB port on your PC; It takes about 4 hours for the player to fully charge.

## Usage of the Battery:

- Recharge and store the battery within the temperature range of  $-5^{\circ}\text{C} \sim 35^{\circ}\text{C}$
- Do not over charge ( Longer than 12 hours ). Excessive charging or discharging may shorten the battery's life.
- Battery life naturally shorten slowly over time.

## Basic Use

### Switch On & Off the player

Turning the electric system ON:

Press and hold the button **PLAY** for 3 seconds, the player is turned on.


Turning the power OFF:

Press and hold the button **PLAY** for 3 seconds again, the player is turned off.

*Note: Power is automatically turned off when none of the buttons have been pressed for a preset period of time.*





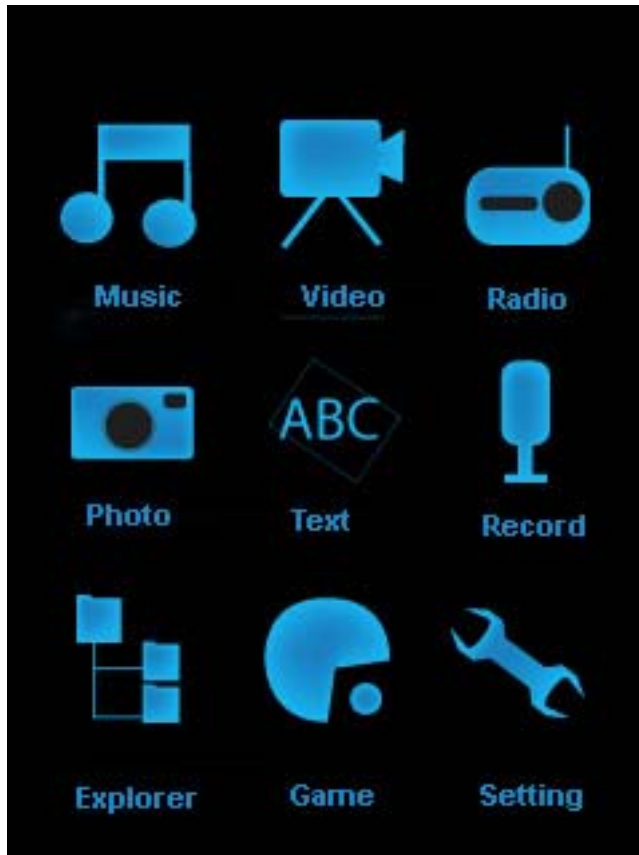

=====

## Chapter 2. Multimedia Function





### Listening to Music





1. Play a music file:
  - a) Power on and move to the main menu.
  - b) Press  to select <Music>,The player automatically plays the first song.  
Play your select file: In music playing status, Press  ( or  ) to select a file.  
long press for the fast forward(or fast Backward) of the current Music
  - c) Press  to Increase volume; Press  to Decrease volume.
2. A-B repeat:
  - a) When you play the music, press  to enter the A-B repeat mode. The player records

this position as A point.

- b) Press  again, the player records this position as B point. Then the player starts repeat from A to B.
- c) Exit A-B repeat mode: Press  to exit.

### 3. To Pause

- 1) Press  while the music is playing, the music playback will be paused.
- 2) Press  again, the music will be played from the point where it stopped.

3. Music Setup : Press  to select EQ and play mode

4. Main menu: Press  to Exit to main menu


5.Backward: Press  to Exit to upper level



## Playing Video

( all video files need to be change into the mp4 avi format using avi convertor)



1.Power on and move to the main menu.








2.Press  to select < Video >. Enter flash memory, enter selected a Video. The Player plays the Video

3.Press  ( or  ) to select a video file long press for the fast forward (or fast Backward) of the current video

**Note:** The player can only play AVI format files, for other kinds of video files, you have to convert them into AVI format files by converting tooling.







## FM Radio



1. Power on and move to the main menu.
2. Press  to select < Radio >
3. Press  to select an item in (Manual), (Preset), (mem) , (Del) and(Auto)
  - a) Manual: press the  ( or  ), you can search the station manually.
  - b) Preset : Press the  ( or  ) to select Saved function,
  - c) mem: Save FM Channels
  - d) Del: Delete FM Channels
  - e) Auto: The player will automatically scan for FM channels
4. Press  to enter recording

## Photo Viewing



1. Power on and move to the main menu.
2. Press  to select < Photo >, enter flash memory , enter selected pictures. Press  The player plays the Photo
3. Press  ( or  ) to select forward and backward.
4. Play Set: Press  to select play time
5. Press  to return to the main menu.

## Reading E-books

( The player can only display TXT format files )



1. Download the TXT format files: Connect the player to the computer by USB cable, choose the files you need, save the file as TXT format to the player.
2. Power on and move to the main menu.
3. Press **ABC** to select < E-books >, enter selected file..
  - a) Press **⏪** ( or **⏩** ) to begin reading.
  - b) Press **📖** to save BookMark or Load BookMark.
  - c) Press **📁** to return to the main menu.

## Voice Recording




1. Power on and move to the main menu.
2. Press **🎤** to select < Record > Enter the < Record>..Press **🟡** to start recording.
3. In recording status, press **⏸** to pause the recording.
4. In pause status, press **🟡** again to continue the recording.
5. Press **📁** to save recording and exit.
6. In prepare status. Press **⚙️** enter into Voice Recording setting.






 
## Explorer



(Using Explorer menu you can play any file type on one screen.)

1. Move to the main menu.
2. Press  to enter submenu and select a file you want.

## Games

1. Move to the main menu.
2. Press  to select <Game>
3. select a game
4. Button Functions
  -  MOVE UP
  -  MOVE DOWN
  -  SELECT
  -  MOVE LEFT
  -  MOVE RIGHT

=====

## Chapter 3. Setting

(Menu Adjustment Setting for MP4 player)



## 1. Music:

### a) Repeat mode

- 1) **Once Stop** after playing all the songs in each directory
- 2) **Repeat one** Repeat playing a single song
- 3) **Folder once** play all the songs in the folder
- 4) **Folder repeat** repeatedly play all the songs in the folder
- 5) **All once** play randomly the songs in the current folder
- 6) **All repeat** repeatedly play all the songs
- 7) **Introduction** play all the songs of the first 10 seconds in the current folder

### b) Play mode

- 1) **Order**
- 2) **Random**

### c) EQ Select

- 1) **Normal**
- 2) **3D**
- 3) **Rock**
- 4) **Pop**
- 5) **Classic**
- 6) **Bass**
- 7) **Jazz**
- 8) **User EQ**

### d) User EQ Set

## 2. FM Radio:

### a) Stereo switch

- 1) **On**
- 2) **Off**

### b) FM Region

The player supports 2 bands: The band in 76MHz~90MHz is for Japan, the band in 87MHz~108MHz is for other countries in the world.

If you change the band setting, the player will delete your previous presets.

- 1) **China** ( 87MHz~108MHz )

- 2) **Europe** ( 87MHz~108MHz )
- 3) **Japan** ( 76MHz~90MHz )
- 4) **U.S.A** ( 87MHz~108MHz )

**3. Record:**

**a) REC quality**

- 1) High Quality
- 2) General Quality

**b) REC Volume**

- 1) +1 ( low )
- 2) +2
- 3) +3 ( middle )
- 4) +4
- 5) +5 ( high )

**4. Display:**

**a) Backlight time:**

- 3) 5 seconds
- 4) 10 seconds
- 5) 15 seconds
- 6) 20 seconds
- 7) 30 seconds
- 8) Always on

**b) Luminosity:**

- 1) 1 (bright)
- 2) 2
- 3) 3 (middle)
- 4) 4
- 5) 5 (dark)

**c) Backlight mode:**

- 1) Normal
- 2) Power saving

**5. System:**

- a) Products Information
- b) Language selection.
- c) Touch screen adjustment.

**6. Power Off Time:**

- a) Off
- b) 10 minutes
- c) 15 minutes
- d) 30 minutes
- e) 60 minutes
- f) 120 minutes

**7. Default Set.**

In this menu, eject out the dialog box, confirm whether to resume the defaulted value, select “YES” or “No”

## 8. Upgrade.

---



---

### **Chapter 4. Troubleshooting**

If you experience problems with the MP4 player, please check the following.

<b>Problem</b>	<b>Check Points &amp; Troubleshooting</b>
ICE1000 fail to turn on	<ul style="list-style-type: none"> <li>- Power will not turn off if the battery is fully discharged. Recharge the battery and turn the power on again.</li> <li>- Press the <b>Res Button</b></li> </ul>
Buttons do not work	<ul style="list-style-type: none"> <li>- Check if you press the right button, then press again.</li> <li>- Press the <b>Res Button</b></li> </ul>
Screen display is blank	<ul style="list-style-type: none"> <li>- If &lt;Power save&gt; is selected from &lt;Setting&gt; / &lt;Display&gt; the LCD will be turn off. Press any button to turn on the LCD or check the Display Settings.</li> <li>- The screen may not be visible under direct sunlight.</li> </ul>
Power is turning off all the time	<ul style="list-style-type: none"> <li>- Check the battery status.</li> <li>- The power is automatically turned off when the battery is fully discharged. Recharge the battery.</li> </ul>
Battery life is inconsistent	<ul style="list-style-type: none"> <li>- The battery time may vary, depending on the sound mode, display setting and what files you are playing</li> <li>- The battery life may be shortened when left for extended periods in low or high temperatures.</li> </ul>
AVI Converter fail to install	<ul style="list-style-type: none"> <li>- Please check if your PC requirements are met.</li> </ul>
PC fail to detect ICE 1000	<ul style="list-style-type: none"> <li>-Please &lt;Start&gt; on the toolbar of your PC to run Windows update. Select Key Updates and Service Packs, and then update all. Reboot your PC and reconnect.</li> <li>- Check if the USB cable is securely connected. Reconnect if necessary</li> </ul>
Cannot play files	<ul style="list-style-type: none"> <li>- Check if the available file has been saved in the memory.</li> <li>- Check if the media file is not damaged or not compatible.</li> <li>- Check if there is enough battery power.</li> </ul>
File fail to upload into ICE1000	<ul style="list-style-type: none"> <li>- Check if the USB cable is securely connected. Reconnect if necessary</li> <li>- Check if the memory is full.</li> <li>- Press the <b>Res Button</b>.</li> </ul>
Files or data are missing	<ul style="list-style-type: none"> <li>- Check if the USB cable has been disconnected during the file or data transmission. If this is the case, it may cause serious damage not only to file/data but also to the player. You have to be extra careful as we are not responsible for data loss.</li> </ul>
Abnormal display of file	<ul style="list-style-type: none"> <li>- Move to &lt;System&gt; / &lt;Language&gt; in the Manual screen and set an</li> </ul>

name.(Different language display)	appropriate language.
The player is very warm	- Heat may be generated during recharging. This has no effect on the player life or functions.

=====

## **Chapter 5. Appendix**

### **Products Specifications**

Display	2.8 inch,touch TFT screen
Power Supply	Built-in 3.7V Li-polimer rechargeable battery
Memory	Built-in flash memory (512MB/1GB/2GB/4GB/8GB )
Earphone Output	(L) 10mW + (R) 10mW (32 Ω )
Output Frequency Range	20Hz~20KHz
SNR	≥85dB
FM Frequency	87MHz ~ 108MHz / 76 MHz ~ 90MHz
Audio format	MP3, WMA etc.
Video format	AVI (XVID) " AVI converted by AVI converter"
Picture format	JPEG
Data Transmission Speed	High speed USB2.0
Temperature Range for operation	-5℃ ~ 35℃
Language	English, Spanish, Chinese, etc.
Operation System	Windows98/SE/ME/2000/XP/VISTA、 Mac OS 10、 Linux 2.4.2

 
*- The contents of this Manual are subject to change without prior notice for further improvement.*

### **Converting Video Files**

All files need to be change into the mp4 avi format using avi convertor

#### **1. Install the converting tool**

- a) Insert the allocation CD dirve in the CD-ROM of your PC.
- b) Run the "AVI Converter Setup.exe" program: Enter the install menu, click on the "NEXT" button, it will appear the figure as follows:
- c) Choose the route of installation, and then click on the "Install" button, until the end of the installation.

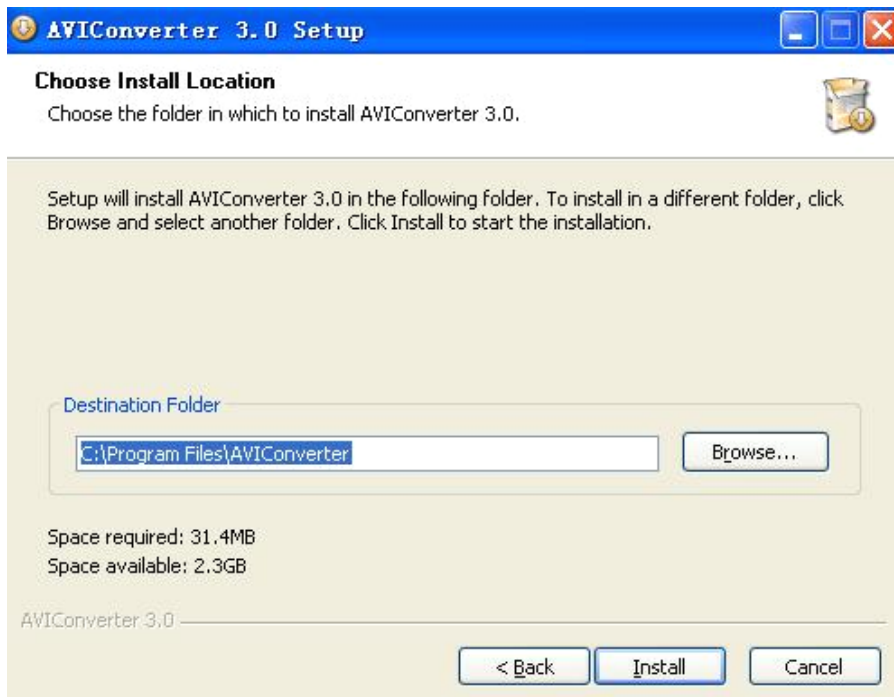


d) At the end of the installation, click on the "Finish" button to finish the installation.




## 2. Converting other format files to AVI format ones.

 ( all video files need to be change into the mp4 avi format using avi convertor)

a) Click and run the "AVI Converter.exe" program, choose the video file which need to be converted and also choose the route of the result. Picture as follows:

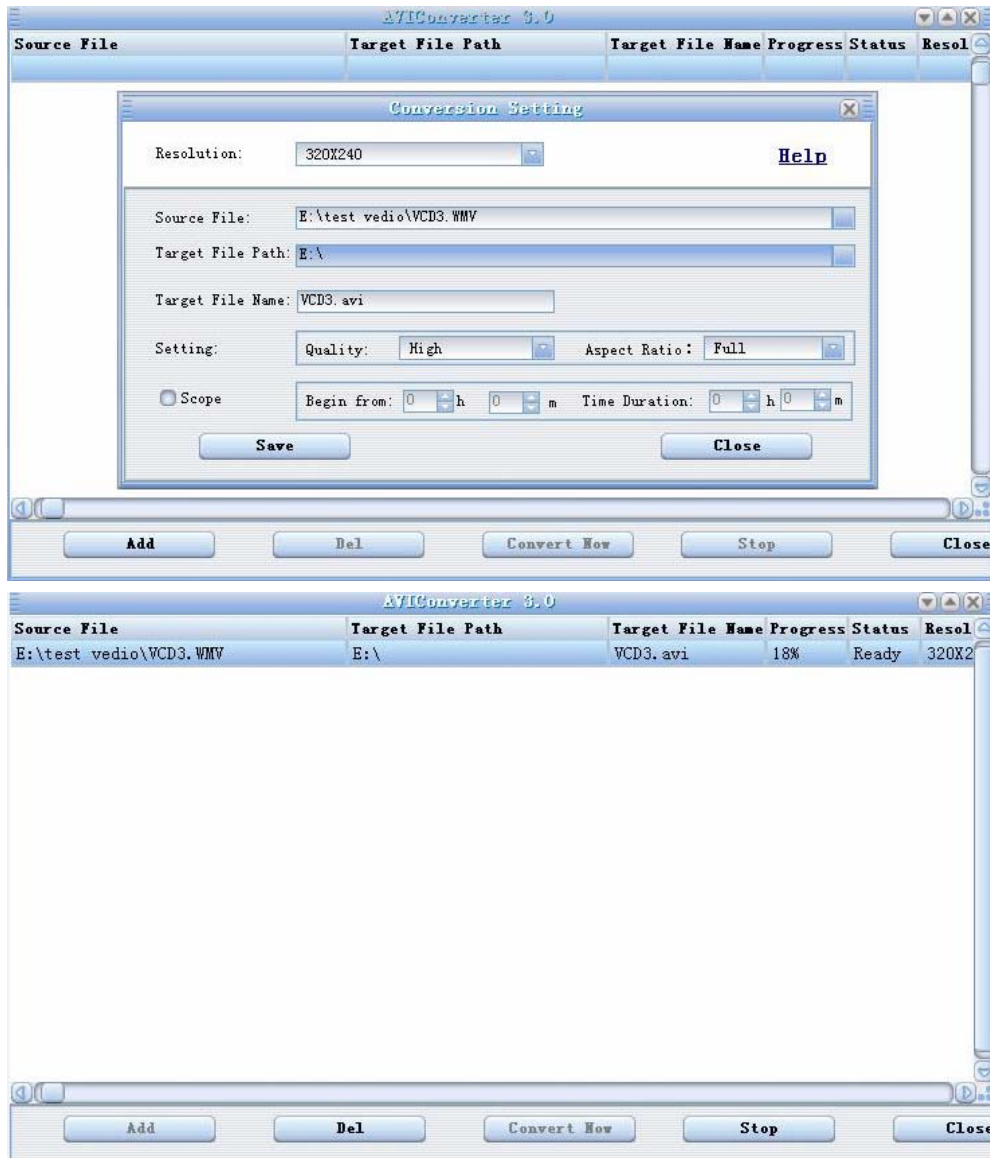

- b) Choose and setup the parameter of the file ( video format: 320\*240 ), and then click on the "Start" button, to convert the "AVI" file.

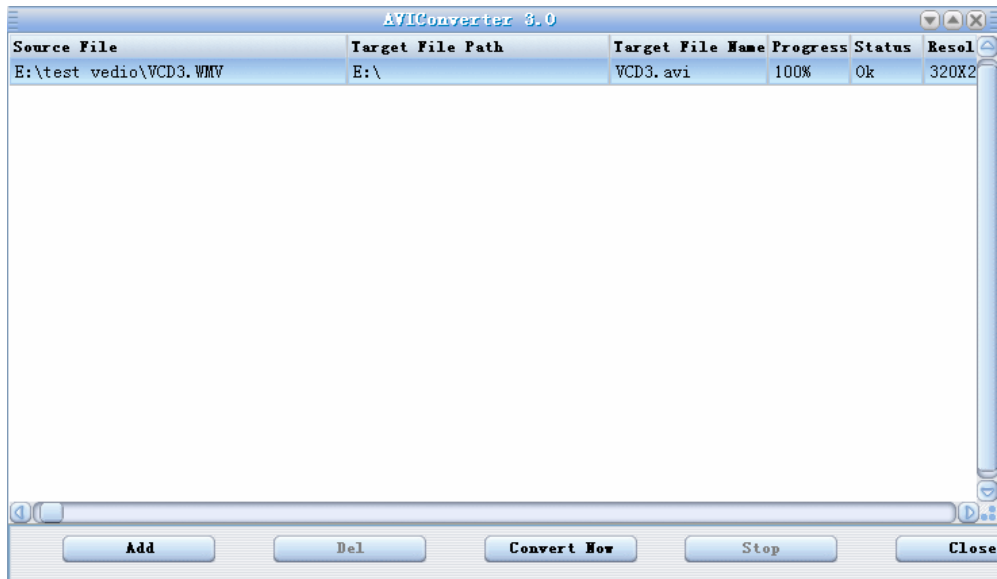

c) The player may play the video which is saved in the player after it finish the conversion.